

These short operating instructions apply for the following devices of INSYS icom:

- EBW-E100



www.insys-icom.com/manual ➔



It is intended for a quick commissioning by the operator. Refer to the associated manual for further information. This and other associated manuals can be found on our website in the menu Support and Downloads > Documentation. Scan the QR code above or enter the URL into your web browser.

Defects Liability Terms

A use other than the intended use, an ignorance of the safety instructions and the documentation, the use of insufficiently qualified personnel as well as unauthorised modifications exclude the liability of the manufacturer for damages resulting from this. The liability of the manufacturer ceases to exist.

Intended Use

The product may only be used for the purposes specified in the function overview of the manual. In addition, it may be used for the following purposes:

- Usage and mounting in an industrial cabinet.
- Switching and data transmission functions in machines according to the machine directive 2006/42/EC.
- Usage as data transmission device, e.g. for a PLC.

The product may **not** be used for the following purposes and used or operated under the following conditions:

- Use, control, switching and data transmission in machines or systems in explosive atmospheres.
- Controlling, switching and data transmission of machines, which may involve risks to life and limb due to their functions or when a breakdown occurs.

Technical Boundaries

Max. line length for power supplies, inputs and outputs as well as other signals: 30 m
Cable cross-section: 0.25 ... 2.5 mm², flexible lines require end sleeves

Support

If you need further support, please contact your sales partner or INSYS icom support. You can contact our support department via e-mail under support@insys-tec.de.

Technical Data

The product is only intended for the use within the permissible technical limits specified in the data sheets. These limits must be observed.

Operating voltage	10 V ... 48 V DC (±20%)	Temperature range	-30 °C ... 70 °C (85 °C restricted)
Power consumption	typ. 2.0 W, max. 3.0 W	Maximum permissible humidity	95% non-condensing
Real-time clock (RTC) buffer time	typ. 2 days	IP rating	Housing IP40 Connectors IP20

A

Router connection

1. Connect supply voltage (10 V ... 48 V DC (±20%)) to the terminals 10...48 V and GND
2. Connect router (LAN 2 / ext) to the DSL modem or Internet router
3. Connect router (LAN 1) to the configuration PC via Ethernet cable

B

LAN settings of configurations PC (Windows 7)


- ① If a DHCP client is active on the PC, proceed with step C. Otherwise, either enable the DHCP client or configure a static IP address.
4. Open Network and Sharing Center (e.g. key and search for "sharing")
5. Select LAN connection and Properties
6. Select Internet Protocol Version 4 (TCP/IP) and Properties

<p>Enable DHCP client</p> <ol style="list-style-type: none">7. Obtain an IP address automatically① It is recommended to unplug the network cable briefly and plug it again upon activation of the DHCP client.	<p>Configure a static IP address</p> <p>Use the following IP address (example):</p> <p>IP address: 192 . 168 . 1 . 2 Subnet mask: 255 . 255 . 255 . 0 Standard gateway 192 . 168 . 1 . 1 Preferred DNS server: 192 . 168 . 1 . 1</p> ① Please note the previous values before changing the TCP/IP settings to be able to restore them later.
--	--

C

Web interface access

8. Enter IP address of the router in address bar of the browser (default: **192.168.1.1**)
- ① If a proxy server is enabled in your browser, this must be disabled or the IP address of the router must be added as exception.
9. Login with User name (default: **insys**) and Password (**icom**)
- ① All modified data will only be transmitted to the router after clicking the OK button.
- ① Refer to the header and display the help text to get helpful information about the individual parameters in the web interface.

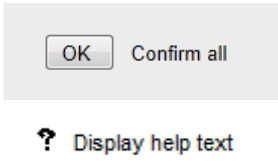


D

Integration into a network (LAN (ext))

- ① If the router is in delivery state or has been reset to factory defaults, the configuration option Fast start after reset to default settings appears upon login.

10. **Activate PPPoE connection**, if a DSL connection is to be configured and enter respective user name and password
OR
Activate DHCP client, if a DHCP server is active
OR
Set static IP address and enter IP address and netmask of the existing network as well as default gateway address and first DNS server address

Quick start with factory settings

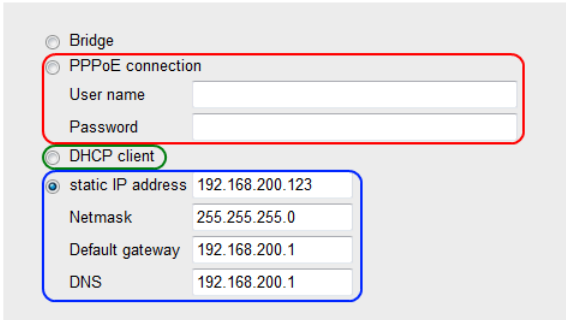

- ① Customer name and device code must only be entered, if the router is to be configured for the **icom Connectivity Suite - VPN** (<https://connectivity.insys-icom.de>).

11. Confirm settings with OK

- ① The COM LED is illuminated **green** during PPPoE connection establishment and **orange** as soon as a connection is established. If a connection to the **icom Connectivity Suite - VPN** is configured, the Status LED will light up **green** as soon as it is established.

E

Configuration of access data

- ① User name and password for web interface access must be changed to prevent a manipulation of the configuration by unauthorised persons.

12. Menu Basic Settings > Web interface: Enter user name and password for authentication with password

13. Confirm settings with OK

- ① A typo during entering or forgetting the configured access data makes the router inaccessible until resetting it to default settings.

All essential configuration steps are completed with this. Further configuration depends on your specific application. Other frequently required settings are available on the following page.

IP Address in Local Network

- ① The IP address of the router in the local network does only have to be changed, if the IP address is already used or a different address range is required.
- 1. Menu Basic Settings > IP address (LAN): Adjust IP address of the router in local network
- 2. Confirm settings with OK
- 3. Adjust IP settings of the PC for further configuration accordingly, if these are not obtained automatically (see step B)
- 4. Menu Server services > DHCP: Adjust address range to the local IP network, if it was not possible to adjust this automatically

Resetting the router

- ① If it is necessary to reset the router during configuration, this is possible without losing the settings.
- 1. Menu System > Reset: Select Reset
- 2. Confirm settings with OK
- ▶ Alternatively, press reset key on the device front once for a short time (soft reset)

Resetting the router to default settings

- ① If the router is to be reset to default settings (if the router has already been used for example), it can be reset to delivery state.
- 1. Menu System > Reset: Select Load default configuration and reset
- 2. Confirm settings with OK
- ▶ Alternatively, press reset key on the device front three times for a short time within 2 seconds

Resetting and initialising the router

- ① If the router is not available any more for any reason, it can be reset and initialised (settings do not get lost).
- 1. Press reset key on the device front for at least 3 seconds (hard reset)



Configuration Guides and manuals for integrating your product into your application are available in the menu Support and Downloads
<http://www.insys-icom.com/support>



For interesting information about your product refer to our website in the menu Knowledge Base
<http://www.insys-icom.com/knowledge>

Hereby, INSYS Microelectronics GmbH declares that herein described device types are in compliance with Directives 2014/30/EU and 2011/65/EU. The full text of the EC Declaration of Conformity is available under www.insys-icom.com/manual.